# PNEUMATIC



TAPPING ARMS



\*Not included with purchase. Must purchase separately.

# Flex rm ACCESSORIES



Five FREE Quick Change Tap Holders included with every arm purchase.

## **Tap Holder Stand**

Keep tooling and tap holders handy, clean, and organized.





# Automatic and Semi-Automatic Tap Lubrication System

Extend tool life by pumping an adjustable amount of lubrication fluid any time the motor is running.

#### **Automatic Depth Stop**

Maintain consistency and improve control.



## **Horizontal Tapping Adapter**

Eliminate material handling by quickly changing from vertical to horizontal tapping.

| SERIES  | REACH   | TAP CAPACITY | MAX TORQUE | SPEED RANGE        |
|---------|---------|--------------|------------|--------------------|
| A-32    | 11"-34" | 0 - 9/16"    | 28 ft/lbs  | 400, 600, 1000     |
| S-36    | 14"-51" | 0 - 9/16"    | 28 ft/lbs  | 400, 600, 1000     |
| M-60    | 22"-76" | 0 - 9/16"    | 28 ft/lbs  | 400, 600, 1000     |
| RNR-20* | 14"-72" | #6 - 7/8"    | 63 ft/lbs  | 100/400 or 200/700 |

\*Available with Multi-head

Actual Tap Capacity and Speed is dependent on motor chosen.